



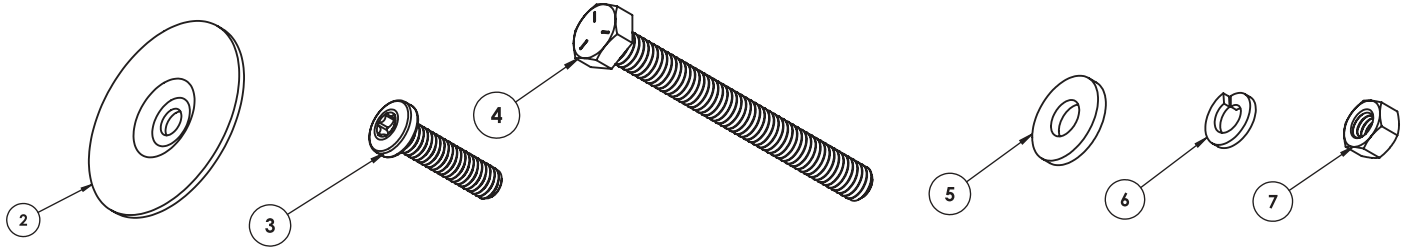

6X6 HUNTING BLIND UNIVERSAL REPLACEMENT FLOOR KIT

ITEM NO.	QTY.	DESCRIPTION
1	2	FLOOR - 6 X 6 BLIND
2	12	CUP WASHER - 5/16
3	12	SCREW - TYPE F TORX - 5/16 - 18 x - 1 1/4 - ZINC
4	12	BOLT - HEX CAP - 5/16-18 X 3IN
5	12	WASHER - STANDARD - 5/16 - ZINC
6	12	WASHER - SPLIT LOCK - 5/16 - ZINC
7	12	NUT - STANDARD - 5/16-18 - ZINC

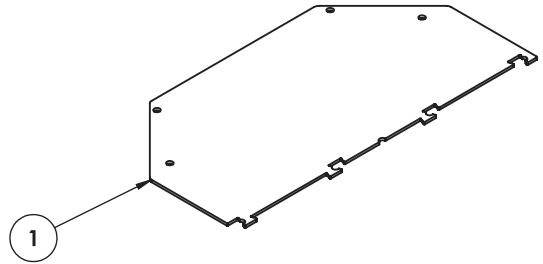

TOOL LIST:

T40 TORX (IF INSTALLED WITH ITEM 3)
 1/2" WRENCHES/SOCKETS (IF EQUIPPED WITH LARGE FLAT HEAD BOLTS)

CAUTION!

IF ALL BOLTS ARE REMOVED THE BLIND SHELL IS NO LONGER ATTACHED TO THE FRAME.

REMOVE OLD FLOOR

OPTION 1

IF THE FLOOR WAS ATTACHED WITH LARGE FLAT HEAD BOLTS YOU WILL USE THE SUPPLIED 5/16 X 3 BOLTS, NUTS, AND WASHERS ALONG WITH THE CUP WASHERS TO ATTACH NEW FLOOR.

OPTION 2

IF THE FLOOR WAS ATTACHED WITH TORX BOLTS, REPLACE FLOOR WITH NEW SUPPLIED HARDWARE. IF ANY RIVET NUTS WERE DAMAGED DURING REMOVAL DRILL OUT RIVET NUT AND DRILL A 3/8 HOLE THROUGH THE FRAME. THEN BOLT WITH THE SUPPLIED 5/16 BOLTS, NUTS, AND WASHERS.

